INDUSTRIAL CURTAIN CONTROLLER STAVOKLIMA

Installation manual

model O

ΕN



<u>www.stavoklima.cz</u> version A

Operations manual

1. Table of Contents

1.	Table of Contents	. 3
	Safety measures	
	Description of the controller	
	Functions of the controller	
	Operation of the controller	
	Controller connection scheme	
	Decommissioning – disposal	

Explanation of symbols used



Instructions for mechanical repairs and maintenance.



Important safety information, technical information, data and device output.



Important electric information - read carefully - unit damage hazard in case of wrong installation.



 $Important\ information\ -\ please\ read\ carefully.$

2. Safety measures

The controller has been manufactured in line with the government decrees and Czech standards harmonized with the EU regulations mentioned in the manufacturer's declaration of conformity.

The above mentioned product complies with the following standards:

The above mentioned product complies with the following directives:

- Directive 2009/125/EC of the European Parliament and of the Council establishing a framework for the setting of eco-design requirements for energy-related products.
- Government Decree No. 118/2016 Coll. Directive 2014/35/EU of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to the making available on the market of electrical equipment designed for use within certain voltage limits.
- Government Decree No. 117/2016 Coll. Directive 2014/30/EU of the European Parliament and of the Council on the harmonisation of the laws of the Member States relating to electromagnetic compatibility.
- Government Decree No. 481/2012 Coll. (Regulation of the European Parliament and of the Council No. 2014/35/EU, Regulation of the European Parliament and of the Council No. 2011/65/EU).
- · Government Decree on restriction the use of some hazardous materials found in electrical and electronic products.

Observe generally applicable national provisions and other related regulations. Unplug the unit from mains before any service intervention. Connection and earthing of the electric device or components thereof must be in line with laws applicable in the country of use. Only qualified staff may carry out any electric service works.



Observe applicable laws, in particular:

- on safety of electric and thermal appliances,
- on central heat distribution systems,
- on fire safety.

3. Description of the controller

- 5-level controller for fan revolution control for Stavoklima industrial units
- 1-2-3-4-5 revolutions switch,
- designed for devices with 230VAC fans,
- electric components for unit control including accessories located in a plastic cabinet,
- fitted with circuit breakers and performance components,
- built-in electrical fuse.

The O-series controllers allow for connection of multiple air curtains. The selection of an appropriate controller type must consider the power input of the unit, or sum of power input of curtains in chain (output power limitation in "A").

Type of control	O2	О3	05	07	010
Designed for max curtain(s) current	2A	3A	5A	7A	10A
Unit power supply	230 V		230 V		230 V
Revolutions control levels	1-2-3-4-5		1-2-3-4-5		1-2-3-4-5
IP rating	IP 54		IP 54		IP 54
Dimensions (length x width x height)	86x166x91		123x240x125		146x272x140

4. Functions of the controller



- Button light on the device is under voltage.
- Button in 0 position the device is off.
- Button in I position the device is on.
- Switch in 1 position revolutions speed level 1 enabled.
- Switch in 2 position revolutions speed level 2 enabled.
- Switch in 3 position revolutions speed level 3 enabled.
- Switch in 4 position revolutions speed level 4 enabled.
- Switch in 5 position revolutions speed level 5 enabled.


5. Operation of the controller

- If the button lights on and in "I" position, the fans rotate at speed configured on the switch.
- Use the speed switch "1-2-3-4-5" to set up the fan speed rate.
- To turn the device off, set the button to "0" position.
- In the event of a sudden power failure, the unit will restart in the mode set on the controller when power is restored.
- Max surrounding temperature 40 °C.
- Designed for industrial environment.



Before any work with the unit, disconnect the electric power by the main button on the controller. Electric shock hazard!

6. Controller connection scheme

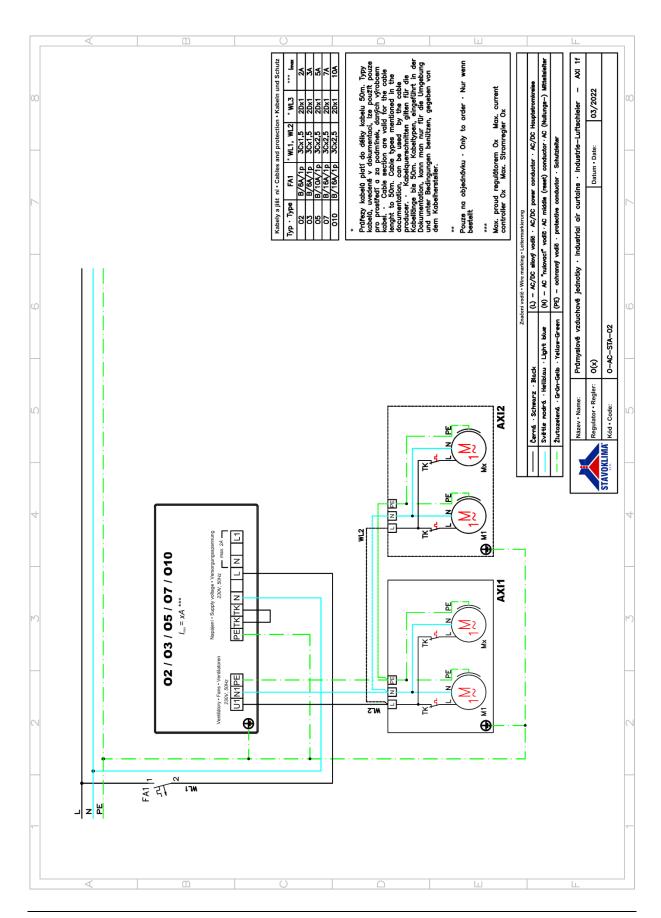

7. Decommissioning – disposal



After the expiration of the service life, the controller must be disassembled and disposed of. Only qualified company may disassemble the device. The product or components thereof must be disposed in environmentally-friendly manner at the end of its service life.

The components of the unit must be separated and sorted out by type of material for disposal. Dispose of the metal and plastic components at your local collection yard. The transport packaging of the product is made of common recyclable material (paper, polyethylene, wood) and is labelled as such according to ČSN 77 0052-2.

As far as disposal is concerned, it is operator's responsibility to comply with applicable national provisions in the country of use. In addition, follow regulations and laws of your country applicable to waste disposal. Separated collection and recycling of the products may help to protect environment and human health.



STAVOKLIMA s.r.o.

Budějovická 450, 370 01 Homole Tel.: +420 387 001 931

e-mail: info@stavoklima.cz

www.stavoklima.cz



8 Technical changes reserved